

HERO4 BLACK /MUSIC

Download the User Manual at
gopro.com/support

When using your GoPro camera as part of your active lifestyle, always be aware of your surroundings to avoid injury to yourself and others, and to prevent damage to your camera.



Before using your GoPro camera, please read carefully all the safety precautions in the Important Product + Safety Information included with your camera.

/ Hello

Congratulations on your new HERO4 Black camera. This Quick Start Guide will show you the basics of capturing life's most incredible moments with your GoPro.

To learn more, download the User Manual at gopro.com/support.

JOIN THE GOPRO MOVEMENT



facebook.com/GoPro



youtube.com/GoPro



twitter.com/GoPro



instagram.com/GoPro

 


To see the complete list of country certifications, refer to the Important Product + Safety Information included with your camera.

/ Getting Started

STEP 1


Remove the camera from The Frame.



STEP 2


Remove the camera side door and insert a microSD card (sold separately).

 (Requires at least a Class 10 or UHS-I microSD card. For a list of GoPro-tested microSD cards, visit gopro.com/support.)




STEP 3

 Open the battery door and insert the battery.

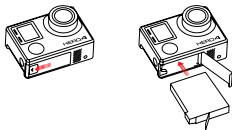

STEP 4

 Charge the battery using the included USB cable.

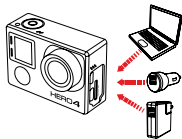


/ The Basics

Shutter/Select Button []

 
Camera Status Screen

Wireless Status Light (blue)

Camera Status Light (red)

Settings/Tag Button []

Power/Mode Button []

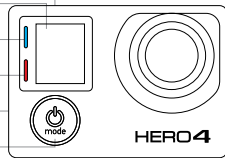


POWERING CAMERA ON AND OFF

To Power On:






Press the **Power/Mode** button [].




To Power Off:

Press and hold the **Power/Mode** button [] for two seconds.

/ Selecting Camera Modes


1. Press the **Power/Mode** button [] repeatedly to cycle through the camera modes.


Camera Modes	Description
 Video	Video, Time Lapse Video, Video + Photo, Video Looping
 Photo	Single, Night, Continuous
 Multi-Shot	Burst, Time Lapse, Night Lapse
 Playback*	Play back content on a TV or LCD Touch BacPac™
 Setup	Adjust general camera settings

2. If necessary, select a different capture mode:
 - a. Press the **Settings/Tag** button [] to open the settings menu.
 - b. Press the **Shutter/Select** button [] repeatedly until you get to the desired capture mode.
 - c. Press the **Settings/Tag** button [] to close the settings menu.


*Playback only appears when the camera is connected to a TV or LCD Touch BacPac (sold separately).

/ Capturing Video and Photos

 
Select your camera mode, then press the **Shutter/Select** button [] to start/stop recording or take a photo.

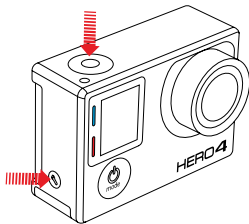




QUIKCAPTURE

When the camera is off and QuikCapture is enabled, you can turn the camera on and immediately begin capturing video or Time Lapse photos just by pressing the **Shutter/Select** [] button. Press once for video, press and hold for two seconds for Time Lapse photos. Press again to stop recording and power off the camera. You can turn QuikCapture on/off in Setup mode.

HIGHLIGHT TAG

 
Press the **Settings/Tag** button [] to tag key moments while recording video or playing back footage on an LCD Touch BacPac. HiLight Tags help you quickly find the highlights later for easy playback, editing and sharing.

/ Adjusting Camera Settings

1. Press the **Power/Mode** button [] to cycle to your desired mode.
2. Press the **Settings/Tag** button [] to enter the Settings menu for that mode.
3. Press the **Power/Mode** button [] to cycle through the options.

4. Press the **Shutter/Select** button [] to select your desired option.
5. Press the **Settings/Tag** button [] to exit the settings menu.


To learn more about settings, download the User Manual at gopro.com/support

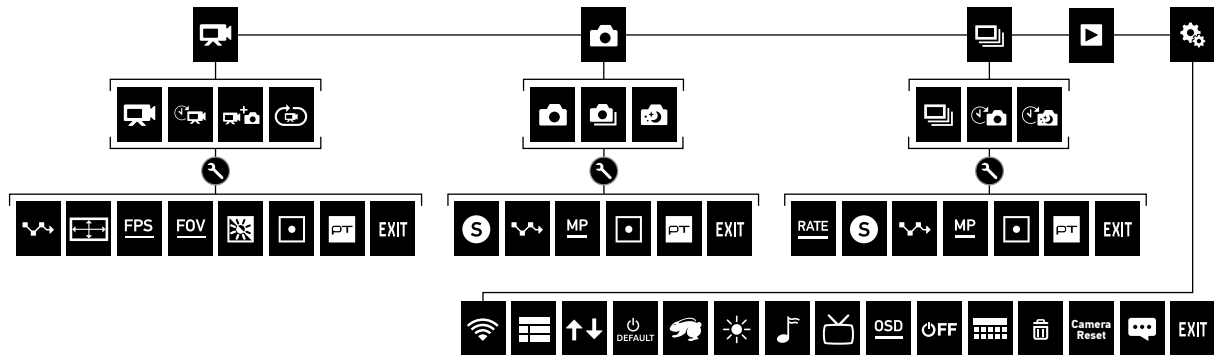

/ Mounting Your Camera

REMOVABLE INSTRUMENT MOUNTS

 These easy-to-remove, non-damaging adhesive mounts are safe for use on most instrument surfaces.

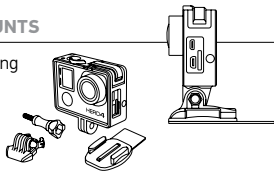

To Install



Step 1
Peel off the adhesive strip's backing.



 
Step 2
Place mount on **clean surface** and **press firmly for 10 seconds.**

Note: The mount's adhesive strip cannot be re-used after removal, so double check your mounting location before applying.

To Remove



Step 1
Do **NOT** pull tab upward. Doing so may damage the mounting surface.



Step 2
Lift mount **gently** while **slowly** pulling tab **parallel to surface.** Failure to hold mount may cause it to snap back at you.

 


WARNING: Do not use on highly fragile or irreplaceable items. Failure to follow instructions may cause damage or injury. Adhesive may occasionally leave non-damaging residue that can be easily removed with a soft cloth.

/ Mounting Your Camera

MIC STAND MOUNT


Mount your GoPro to standard U.S. 5/8"-27 mic stands. Includes an adapter for European 3/8"-16 mic stands.

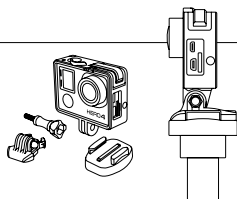

SIDE MOUNTING




 VERTICAL MOUNTING

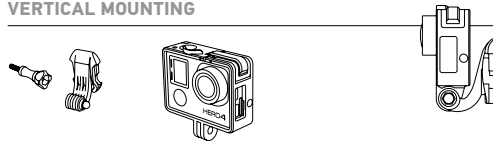

/ Mounting Suggestions

 Here are a few ways you can mount your GoPro to instruments and equipment.

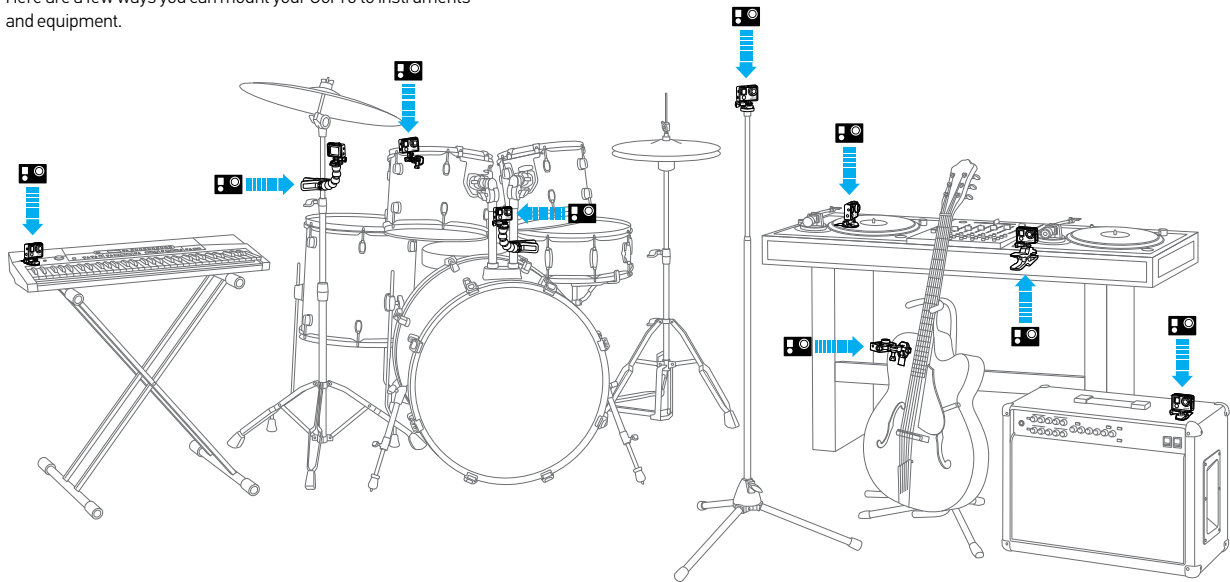

/ Playing Back Videos and Photos

There are several ways to play back your videos and view your photos.



COMPUTER

Connect the camera to your computer with the included USB cable to transfer content for playback.

For help accessing your GoPro content, download the latest GoPro software at gopro.com/getstarted.



LCD TOUCH BACPAC™

This removable LCD touch screen seamlessly attaches to the back of your GoPro, delivering quick playback of videos and photos (sold separately).



SMARTPHONE + TABLET

Use the GoPro App to play back content on your smartphone or tablet. For more info, see *GoPro App*.



TV

See your content on the big screen. Connect your camera to your TV with a micro HDMI*, composite or combo cable (sold separately).

/ Sharing Videos and Photos

There are a few ways to share your videos and photos.



COMPUTER

Connect the camera to your computer with the included USB cable to transfer content for sharing.



SMARTPHONE + TABLET

Use the GoPro App to share videos and photos by text, email or on your social networks. For more info, see *GoPro App*.

/ GoPro App

CONTROL. VIEW. SHARE.

The GoPro App lets you control your camera remotely using a smartphone or tablet. See what your camera sees with live preview. View photos and play back videos, then share your favorites via email, text, Facebook, Twitter and more.

TO CONNECT TO THE GOPRO APP

1. Download the GoPro App and open it on your smartphone or tablet.
2. Follow the app's on-screen instructions to connect your camera.

(If needed, the default password for your camera is goprohero.)

For complete pairing instructions, visit gopro.com/support.



/ Help and Resources

Visit gopro.com/getstarted to learn more:

UPDATE YOUR CAMERA

Get the latest features and best performance.

.....

CREATE A GOPRO ACCOUNT

Enter for a chance to win Video of the Day, Photo of the Day and more.

.....

DOWNLOAD THE USER MANUAL

Find detailed info on settings, modes and more.

GET THE GOPRO APP + GOPRO STUDIO

Control your camera remotely. View and share content. Create videos.

.....

WATCH A TUTORIAL VIDEO

Learn tips + tricks from the pros.

.....

CONTACT CUSTOMER SUPPORT

Get help and find answers to frequently asked questions.